

# KEYSWITCH CONTROLLER GUIDE

The following sections can be used after power has been applied to the light lift and the controller is plugged into the controller wire. Turn off light switch to chandelier.

**CEILING POSITION:** The light lift will automatically shut itself off at the ceiling. The chandelier will only light in the CEILING POSITION.

**DOWN POSITION:** User controls the DOWN POSITION. The DOWN POSITION is where the light lift is at the desired elevation for chandelier maintenance. The light lift will automatically shut itself off anytime the key is released.

## TURN ON THE CONTROLLER:

1. Insert the key into the key lock.

## NORMAL OPERATION:

1. Turn and hold the key to the **right** to operate the light lift **down**.
2. Turn and hold the key to the **left** to operate the light lift **up**.
3. Anytime the key is released the light lift will stop.
4. Release the key once the chandelier has reached the DOWN POSITION.
5. Allow at least two seconds between **up** and **down** commands.
6. The light lift will automatically shut itself off at the CEILING POSITION.

## TURN OFF THE CONTROLLER:

1. Remove the key from the key lock.

## Safety Warnings

**Call Aladdin Light Lift immediately if the light lift operates down while turning the key to the left and up while turning the key to the right. A safety hazard can occur and cause the chandelier to fall, which could cause death, personal injury and/or property damage.**

**Never operate the Aladdin Light Lift without tension on the cable. Never remove or tamper with the cable safety device. Never install an Aladdin Light Lift that has the cable safety device removed or tampered with. The cable safety device consists of the limit switch and small gauge rectangular wire. It is located directly in front of the winch drum. Removing or tampering with the cable safety device could cause the cable to become reversed wrapped on the winch and could also cause the cable to unravel off the winch drum and get damaged. Never install or operate an Aladdin Light Lift that has a frayed, kinked, or otherwise damaged cable. Never operate the Aladdin Light Lift without first removing the paper tape from the winch drum. Avoiding any of these could cause the chandelier to fall, which could cause death, personal injury, and/or property damage.**

See SMART LIFT CONTROLLER GUIDE on flip side

# SMARTLIFT CONTROLLER GUIDE

The following sections can be used after power has been applied to the light lift and the controller is plugged into the controller wire. Turn off light switch to chandelier.

**CEILING POSITION:** The light lift will automatically shut itself off at the ceiling. All of the SmartLift Controller's functions are relative to the CEILING POSITION.

**DOWN POSITION:** User has the option of programming a DOWN POSITION into the SmartLift Controller. The DOWN POSITION is where the light lift will automatically shut off at the desired chandelier maintenance elevation. Programming the SmartLift Controller allows the user freedom from holding the buttons during operation.

## TURN ON THE CONTROLLER:

1. Turn on the Controller by inserting key into keylock and rotating to the 3 o'clock (ON) position. The Controller will beep and the **READY** light will turn green.

## PROGRAM THE DOWN POSITION:

The light lift must be at the CEILING POSITION to start the programming process. Only program the controller after the chandelier is installed and the final chain length is determined.

1. Turn on the controller if needed.
2. Press and hold **UP** until the light lift is at the CEILING POSITION, then release.
3. Press and hold **DOWN** until the chandelier reaches the desired DOWN POSITION, then release.
4. Press and release **SET** then press and release **DOWN**. The DOWN POSITION is programmed when the controller beeps.
5. Press and release **AUTO** then press and release **UP** to run the light lift back to the CEILING POSITION.

## NORMAL OPERATION:

Once the SmartLift Controller is programmed, perform the following for operation:

1. Turn on the controller if needed.
  2. Press and release **AUTO** then press and release **DOWN** to run the light lift to the DOWN POSITION.
  3. Press and release **AUTO** then press and release **UP** to run the light lift to the CEILING POSITION.
- To stop the light lift from lowering at any time, press and release **UP**. To stop the light lift from raising at any time, press and release **DOWN**.

## UNPROGRAMMED OPERATION:

If you choose not to program your SmartLift Controller, perform the following for operation:

1. Turn on the controller if needed.
  2. Press and hold **DOWN** to run the light lift down.
  3. Press and hold **UP** to run the light lift up.
- Release **UP** or **DOWN** to stop running the light lift at any time.

## CLEAR THE DOWN POSITION:

1. Turn on the controller if needed.
2. Press and hold **SET**.
3. While holding **SET**, press and hold **DOWN**.
4. When the **DOWN** light flashes, release both buttons.
5. Press and release **DOWN**. The DOWN POSITION is cleared when the controller beeps.

## TURN OFF THE CONTROLLER:

1. Rotate key from 3 o'clock (ON) position to 12 o'clock (OFF) position.
2. Remove key from keylock and store in a safe and secure location.

**Never leave Controller (ON) when not in use.**

See **SAFETY WARNINGS** on flip side

See **KEYSWITCH CONTROLLER GUIDE** on flip side