

SMARTLIFT CONTROLLER GUIDE

HOME POSITION: Understanding the HOME POSITION is essential to operating and programming the SmartLift Controller. The HOME POSITION is when the light lift automatically shuts itself off at the ceiling.

NEW INSTALLATION:

--Plug the controller into the low voltage control wire and make sure power is applied to the light lift.

--If the light lift is at the HOME POSITION, proceed to PROGRAMMING THE DOWN POSITION.

--If the light lift is NOT at the HOME POSITION, all of the lights will flash and the unit will beep three times. To enable the controller, press the **SET** button until it beeps and the **SET** light flashes. Now, press the **UP** button. The controller is enabled when it beeps and the **READY** light turns green. The **UP** and **DOWN** lights will flash and it beeps. Press the **UP** or **DOWN** button to run the light lift depending on your installation needs. The controller becomes disabled after 90 seconds of inactivity.

--When ready, press the **UP** button to run the light lift to the HOME POSITION. The controller can only be programmed from the HOME POSITION.

PROGRAMMING THE DOWN POSITION:

--The light lift must be at the HOME POSITION for programming.

--Programming the controller's 'down position' should not be performed until the chandelier is installed and final chain length is determined.

--To program a 'down position,' first enable the controller. To enable the controller, press the **SET** button until it beeps and the **SET** light flashes. Now, press the **UP** button. The controller is enabled when it beeps and the **READY** light turns green. The controller becomes disabled after 90 seconds of inactivity.

--Once enabled, press the **DOWN** button until the chandelier reaches the desired elevation. Press the **SET** button then press the **DOWN** button. The 'down position' is programmed when it beeps and the **DOWN** light is on.

--To return the light lift to the HOME POSITION press the **AUTO** button then the **UP** button. The light lift will run up automatically and shut off at the ceiling.

--When the 'down position' is programmed, it will always be remembered: even if there is a power outage. If there is a power outage, run light lift to the HOME POSITION before running it to the 'down position.'

--To clear the programmed 'down position,' press the **DOWN** button and the **SET** button simultaneously until the **DOWN** light flashes. Press the **DOWN** button again and the programmed 'down position' is cleared with a beep.

--Once the controller is programmed, use the NORMAL OPERATION section for future use.

NORMAL OPERATION:

--To operate the light lift, first enable the controller. To enable the controller, press the **SET** button until it beeps and the **SET** light flashes. Now, press the **UP** button. The controller is enabled when it beeps and the **READY** light turns green. The controller becomes disabled after 90 seconds of inactivity.

--If controller is programmed, press the **AUTO** button then the **DOWN** button to run the light lift to the 'down position.' Press the **AUTO** button then the **UP** button to return the light lift to the HOME POSITION. Press the **UP** button to stop the lift from running down at any time. Press the **DOWN** button to stop the lift from running up at any time.

--If the controller has not been programmed, press the **DOWN** button to run the light lift to the desired elevation. Press the **UP** button to return the chandelier to the HOME POSITION.

--Although the controller will disable after 90 seconds of inactivity, it may be necessary to disable it on your own. To do so, press the **SET** button until it beeps and the **SET** light flashes. Now, press the **UP** button. The controller is disabled when it beeps and the **READY** light goes out.

OTHER IMPORTANT NOTES:

--Never fully extend all of the winch cable from the light lift. This can cause a reversed cable situation which can be hazardous. See the owner's manual for cable length.

--Never allow a child to operate an Aladdin Light Lift or SmartLift Controller.

--Make sure the winch cable is plumb through the center of the ceiling box before running light lift to the HOME POSITION.

--Contact Aladdin Light Lift's technical support if you experience problems operating the SmartLift Controller. (877) 287-4601