




SPECIAL INSTALLATIONS: DOME CEILINGS

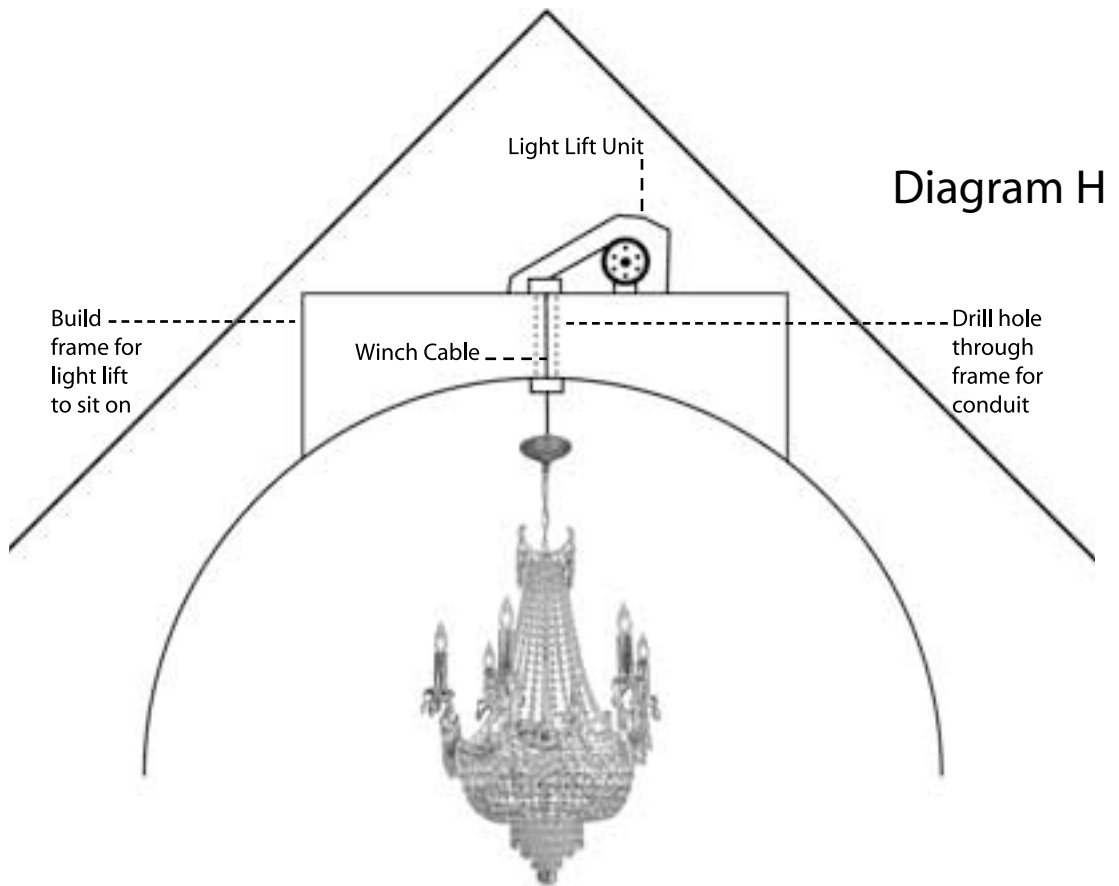

Dome Ceilings

Build frame for light lift to sit on, drill a hole through the center of the frame for the conduit to go through. Attach the ceiling box and wiring from below. See SPECIAL SITUATIONS 'C' for further assistance.

SPECIAL INSTALLATIONS: SLOPED CEILINGS

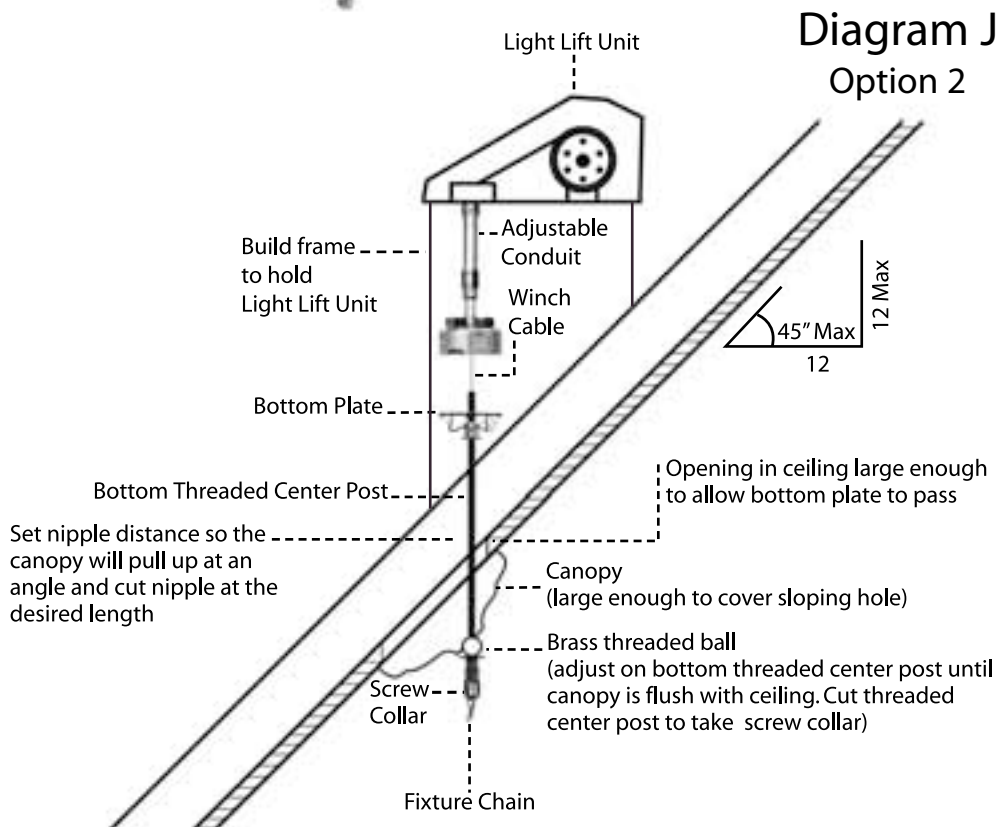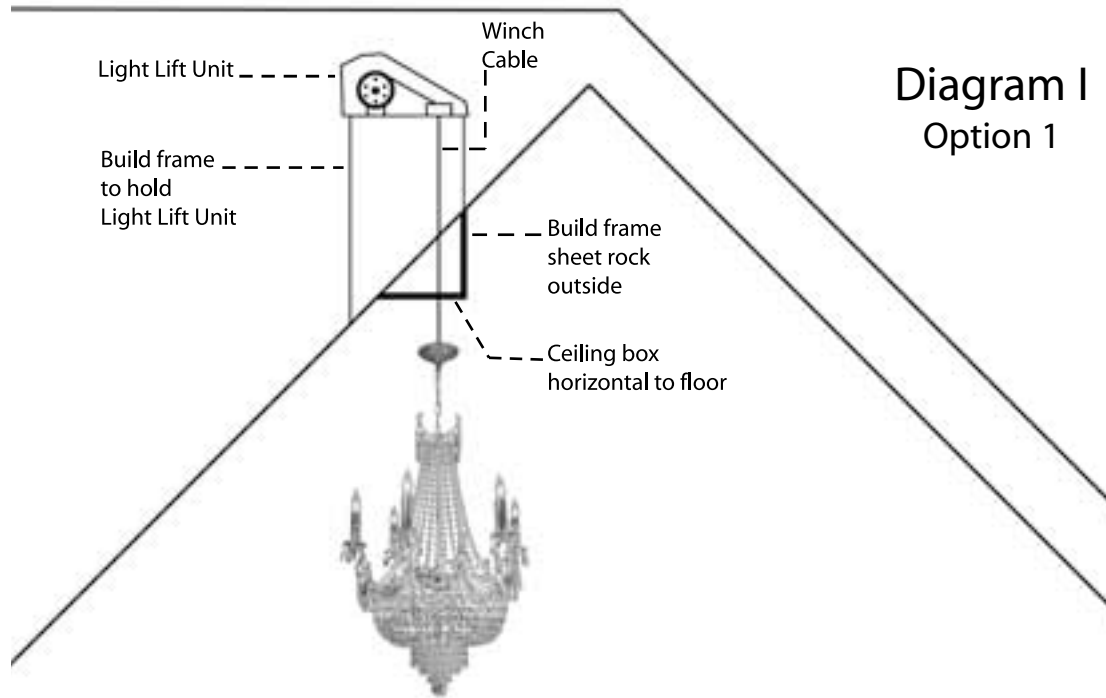

Sloped Ceilings

If the chandelier is to hang from sloped ceiling:

Option 1 - build a frame above ceiling in attic to hold the light lift, build a frame around the ceiling box so it will sit horizontal with the floor. Sheetrock outside the frame so the light lift is level.

Option 2 - Order a sloped ceiling adapter. If there is not enough clearance above the ceiling to mount the light lift, you will need to order the remote mounting option.